

Fruit and Vegetable Cleaner Bar

3880

Instructions for use


Please read this instruction manual before use

Forbiddances

- Do not put the charger adapter immersed in water or any liquid.
- This product contains a built-in rechargeable battery. Do not put it into the fire, heat, or charge, use or place at high temperature place.
- Do not knock or drop the product, if it was damaged because of collision or fall, do not use it again.
- Do not rebuild, dismantle or repair the product yourself.
- Check before using to make sure if any damaged because of vibration. If it had severely damage or lose of control, please do not use it.
- If any damage for the charger, please do not use it.
- This product is not suitable for children, babies and the operator who know less of it, to use, unless they have regulatory or guidance of using machine from their Security Chief.

Warnings

- Please check the local voltage if it matches the power supply voltage labeled on the product before you connect the power supply.
- After disinfection, make sure the charging source plug and hands are completely dry, then connect the power supply.
- Keep it away from children and infants, it cannot be a toy.
- If didn't use it for a long time, please make it completely dry.
- Do not charge for a long time, except for the first time charging for 12 hours, later charging 2-3 hours for each time.

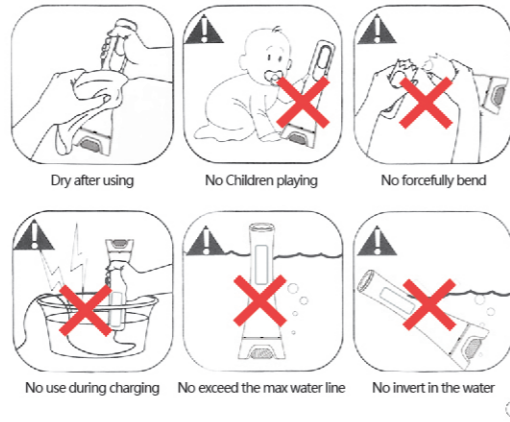

Product information

Product name: Fruit and vegetable cleaner bar Product No.: 3880
 Rated voltage: DC-8.4V Current Rating: 1.2A
 Wattage: 10 W Weight: 850g
 Dimension of the product: 103*292mm Dimension of the package: 325*115*115mm

Including:
 Fruit and vegetable Cleaner bar * 1
 Charger * 1
 Instructions * 1



Environment Protection

At end of the product's life, do not thrown away it with common household waste. Please place it in the appointed government's Recycle Bin. Remove the rechargeable battery only after the end of product life, and place the rechargeable battery in government-designated battery trash. Before removing the battery, make sure rechargeable battery is fully depleted, and take safety precautions. The life of the battery is about four years, even if get full electric charge, the times of being used would be reduced rapidly, it means the life of the battery may have been exhausted, (according to the using and storage conditions, the life of battery would be different.)

Phenomenon

Phenomenon	Reasons	Possible solution
Switch control key is not working or LED light doesn't display	①Lack of electricity, cannot turn on ②Haven't place it into the water	①Charge immediately ②Placed it in a water container
Working without bubbles or blue LED light flashes	①Lack of electricity, difficult to start ②Water does not meet the minimum induction hole ③Water has exceeded the maximum water level	①Charge immediately ②Add water above the minimum induction hole ③Remove disinfection stick, upside down to shake off water, then use it after placing 3-5 hours
No vibration during working or working for a while then stop working	①Lack of electricity, difficult to start ②Water does not meet the minimum induction hole ③Water has exceeded the maximum water level	①Charge immediately ②Add water above the minimum induction hole ③Remove disinfection stick, upside down to shake off water, then use it after placing 3-5 hours

If these corrective measures do not solve the problem, still cannot use it normally, please contact the merchant, we provide one year warranty for you.

Guarantee list

The warranty card (service card) prove that the product is one of our Company's qualified products.
 1. For warranty period, buyer has the products protection (free repair) from the date of purchasing.
 2. During warranty, the product can only get repaired in the designated place. When getting repair, the buyer should show this warranty card and the document of purchasing time.

These two tips should be pay high attention:

- There will be no replacement for this warranty card, please keep it well.
- This warranty card only for China mainland (HongKong, Macao, Taiwan are not available for now).

From the date of purchasing, the whole machine has one year warranty for the problem during daily common using.

Any one of these situations, even during warranty time, we provide reparation with cost.

- Purchased one year ago
- Without warranty card and the document of purchasing time
- Problem caused by act of God, like fire, earthquake, typhoon, flood, war, or other external factors
- Scars, stains and other appearance damage during using
- The problem caused by rebuilt, dismantle or repair the product by yourself
- LED light, battery and other consumables, the damage of accessories
- The problems exist because of outside using, not using at home, like commercial activities.

Warranty Card

Dear customer, thank you for you choose us. Whatever the reason you need replacement or refund, we apologize and regret to you! Whatever the question is, please be relax and communicate with us, we will do our best to help you figure the problem out.

To help us as soon as possible, please fill the blank, * are required fields, Replace Refund

*Invoice number: _____

*Telephone: _____

*Purchasing date: _____

*Name: _____

Address: _____

The reason or comments of replacement or refund: _____

Fruit and Vegetable Cleaner Bar

3880

Instructions for use

Please read this instruction manual before use

Fruit and Vegetable Cleaner Bar

Ultrasonic and Ozone Dual-Core Technology

- Degradation of pesticide residues in fruits and vegetables
- Meat Sterilization
- Kitchen tableware disinfection
- Children's toys, clothing sterilization
- Killing bacteria and virus on the cover of fruit and vegetable
- Eliminating the bacteria hidden deeply in the seafood
- Infant bottle sterilizer
- Glasses, jewelry, watches and other disinfection



Fruit and vegetable



Meat and Seafood



Bottle kettle



Baby Toys




Chopsticks and tableware



Glasses and Jewelry

Name for each part of equipment

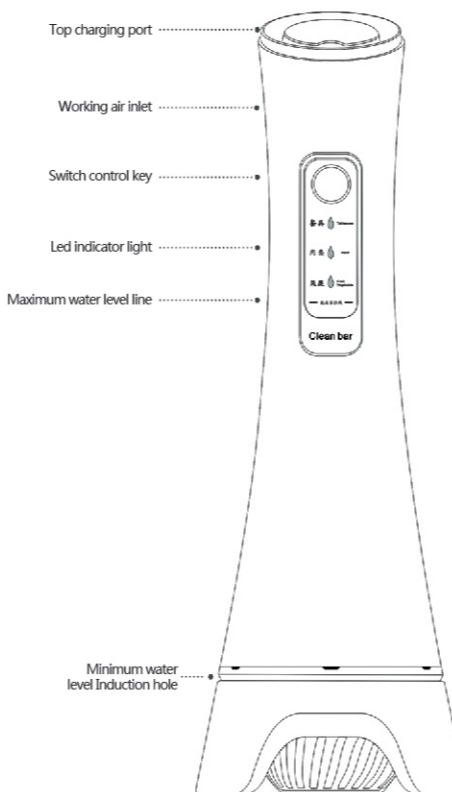

Method of using

Step 1: At the first time using, connect the cleaner bar with the charger, charge it for 12 hours. Next time, when the light on the charger from red turn into green, it means the charging is completed.



Step 2: According to the food need to be cleaned, put the right amount of water into the basin. Then put the cleaner bar on the center of basin. Make sure that the water level is over than the Minimum level Induction hole. Then put the fruit, vegetable, or other food need to be cleaned. Pay attention that the water level should below the maximum water level line.



Step 3: Press the Switch control key on the cleaner bar for 2 seconds, it will start decontamination function. The default model is Fruit Vegetable. The model can be changed according to the clearing objection by pressing the switch, such as Meat model or Tableware model.



Step 4: When the working time finish, the machine will shut down automatically. During working, the cleaner bar can be forced shutdown by press the switch for 2 seconds. If the food is too much, we suggest disinfection into several times, and repeat the step 2 and step 3. After finishing working, remove the cleaner bar, clean the head with water, shake off the water, and use cloth to make it dry. Put the cleaner bar in a clean and smooth place, convenient to pick up next time.

Notices: 1. on the model for tableware, the cleaner bar can not only be put in the water to disinfect the tableware, feeding bottles, toys and others, but also be put in the air to do the disinfection and to remove peculiar smell.
 2. To prevent cross-contamination of food, it would be better that clean the vegetable, fruit, and meat separately.
 3. The time for vegetable and fruit, meat, tableware is 2.5 minutes, 3 minutes, 3.5 minutes.